


EPOS

IMPACT DW Office - HS

Battery Removal Guide

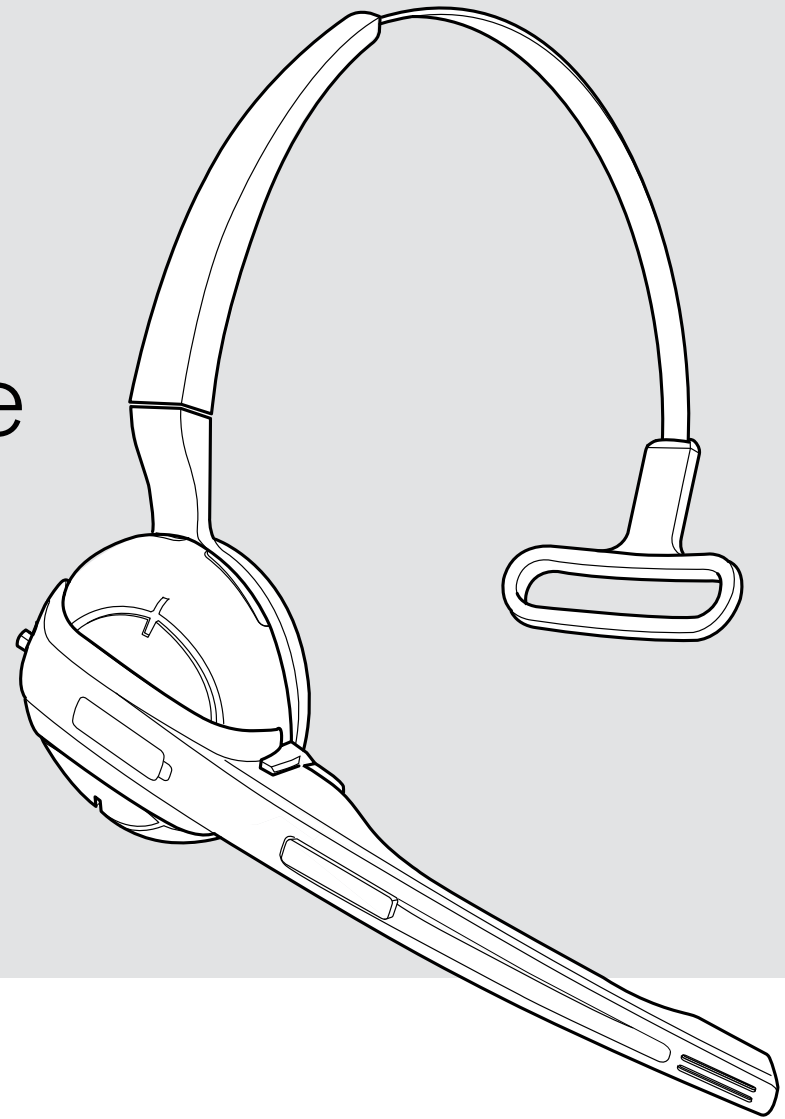



DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark
www.eposaudio.com

Publ. 12/21, A01




THE POWER OF AUDIO

Battery Removal Guide

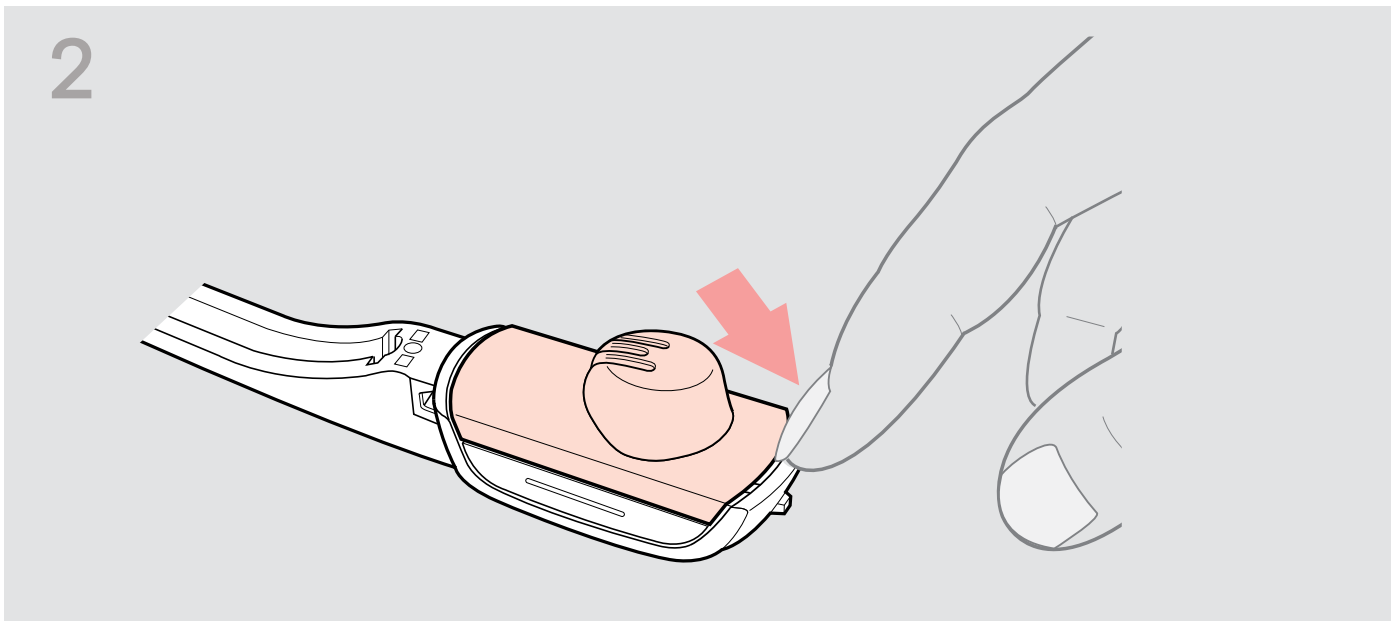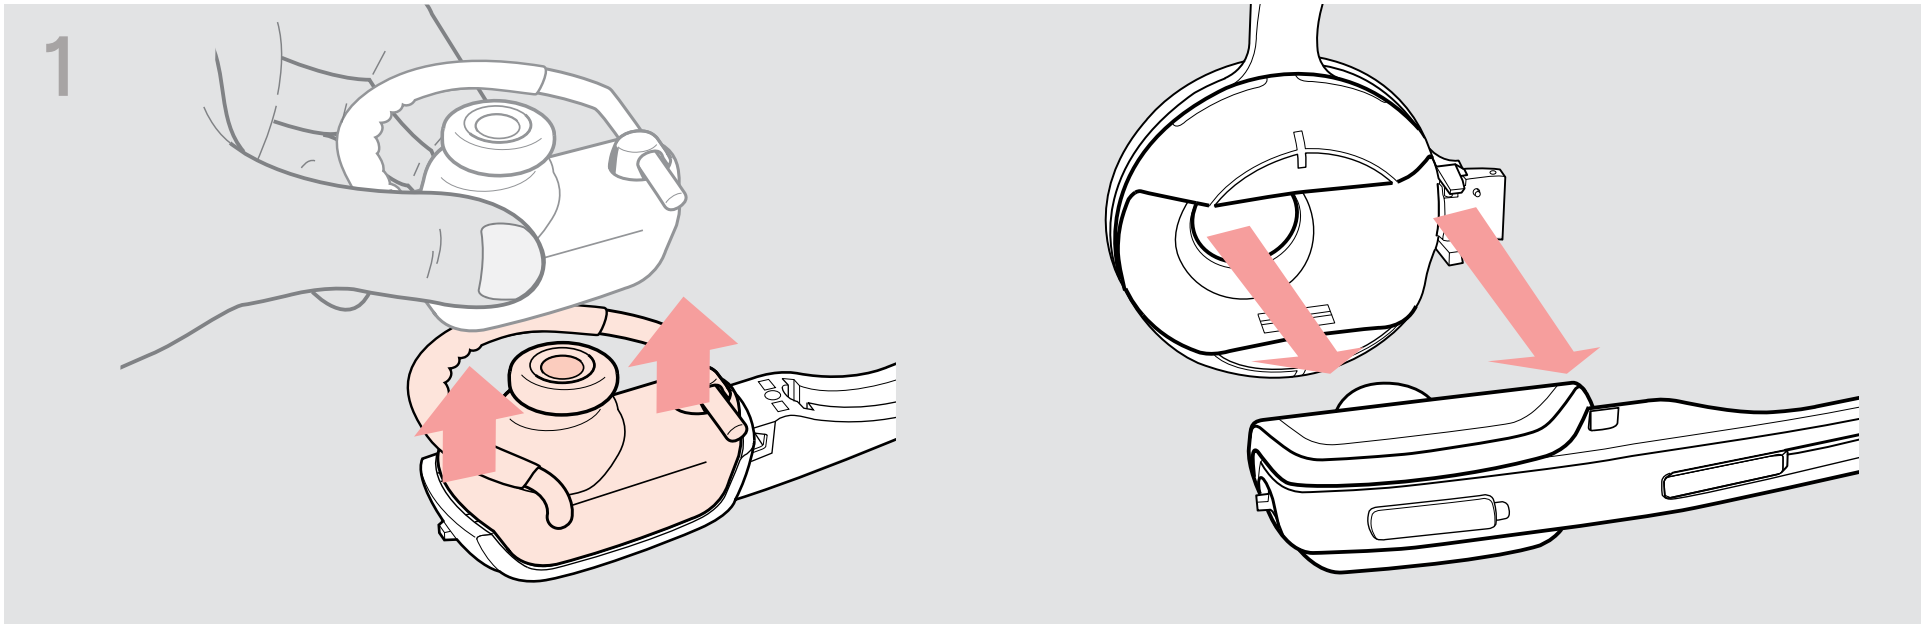

1. Remove the ear hook adapter or the headband.
2. Open the battery compartment.

Battery Removal Guide

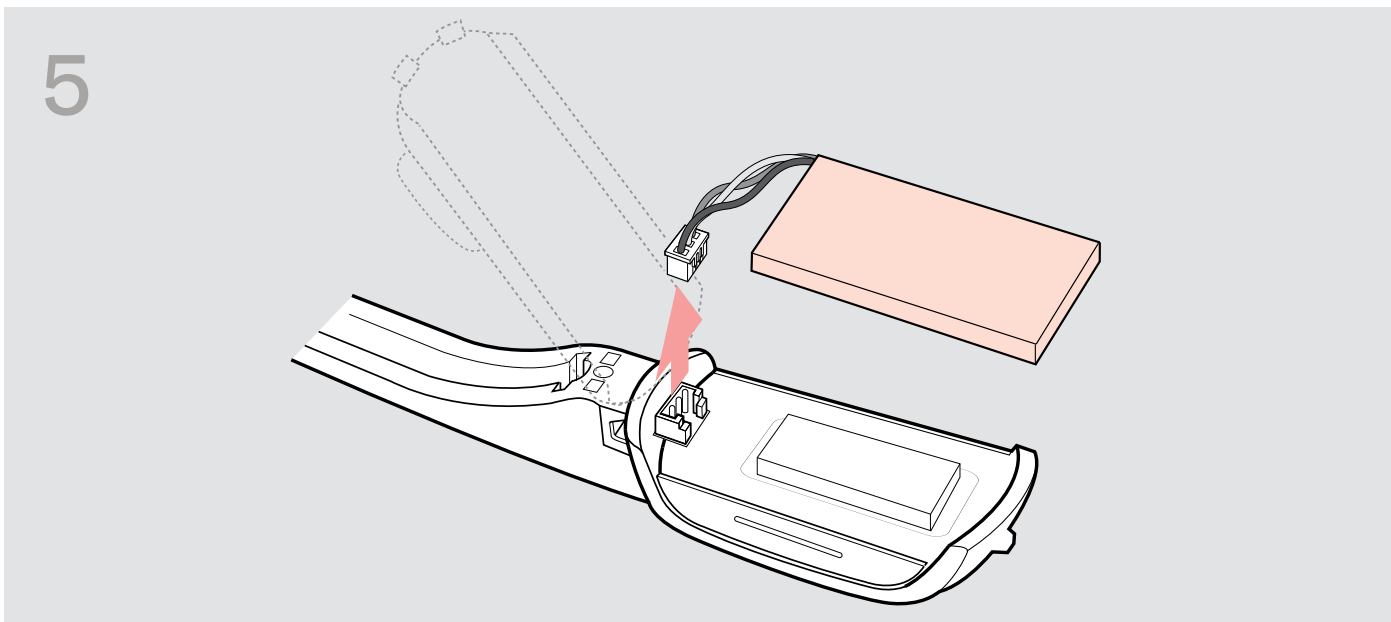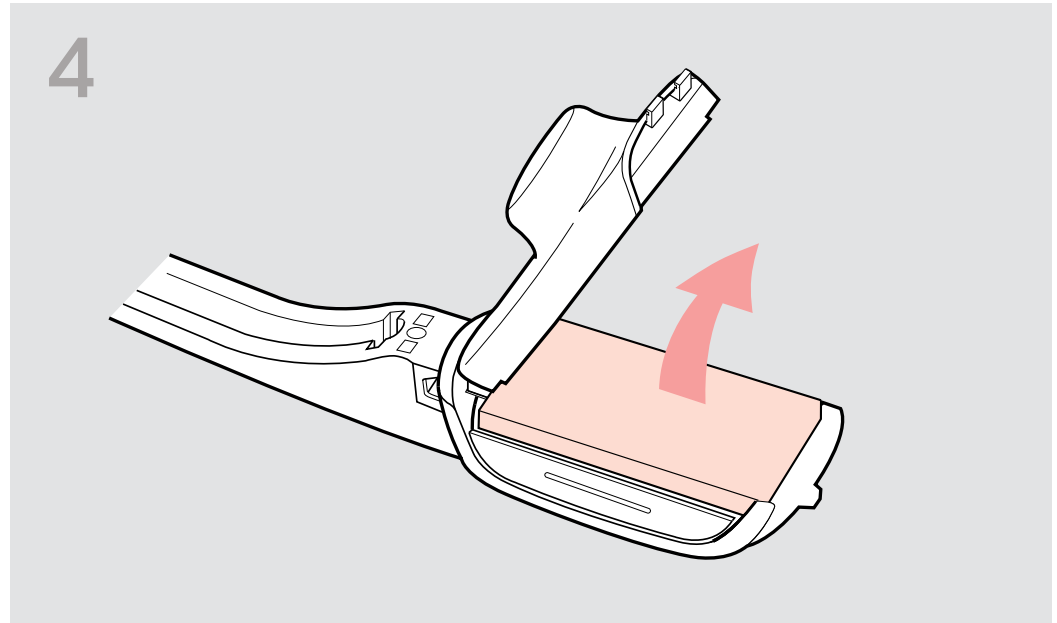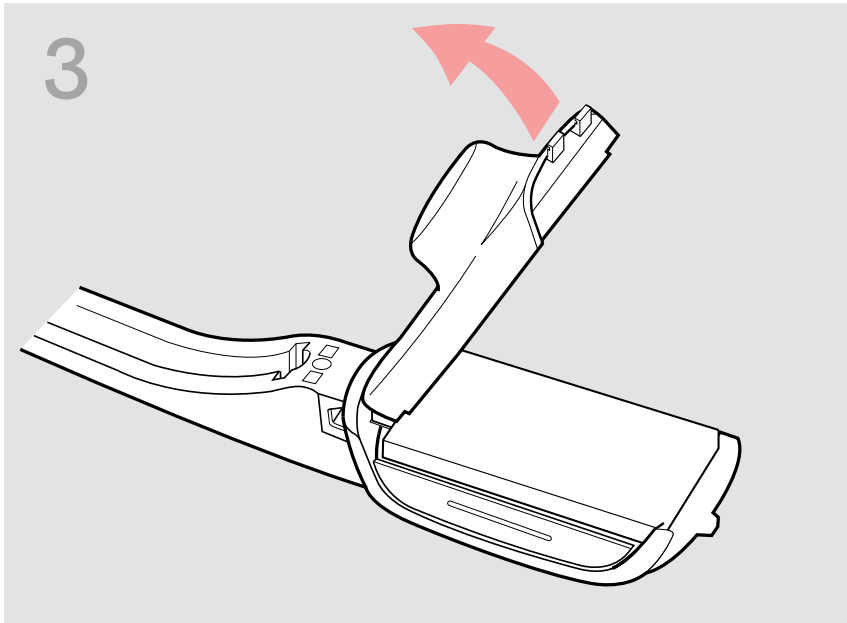

3. Move the battery compartment cover in the direction of the arrow until you overcome a slight resistance.
4. Lift the rechargeable battery.
5. Unplug the connector and remove the rechargeable battery.